

Product End-of-Life Disassembly Instructions

Product Category: Servers

Marketing Name / Model
 [List multiple models if applicable.]

HPE ProLiant DL385 Gen10

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HPE products to remove components and materials requiring selective treatment, as defined by EU directive 2012/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

1.2 Enter the quantity of items contained within the product which require selective treatment in the right column, as applicable.

1.3 Quantities vary by product configuration

Item Description	Notes	Quantity of items included in product
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 sq cm	9
Batteries	All types including standard alkaline and lithium coin or button style batteries Quantity varies by product configuration and power supply model selected	2 to 4
Mercury-containing components	For example, mercury in lamps, display backlights, scanner lamps, switches, batteries	0
Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm	Includes background illuminated displays with gas discharge lamps	0
Cathode Ray Tubes (CRT)		0
Capacitors / condensers (Containing PCB/PCT)		0
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height	Quantity varies by product configuration and power supply model selected	1 to 10
External electrical cables and cords	Quantity depends on number of power supplies, networking devices, and I/O devices	1 to 15
Gas Discharge Lamps		0
Plastics containing Brominated Flame Retardants		0
Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner	Include the cartridges, print heads, tubes, vent chambers, and service stations.	0
Components and waste containing asbestos		0

Item Description	Notes	Quantity of items included in product
Components, parts and materials containing refractory ceramic fibers		0
Components, parts and materials containing radioactive substances		0

2.0 Tools Required

List the type and size of the tools that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description	Tool Size (if applicable)
Torx Driver	T-10
Torx Driver	T-5
Philips Driver	#2
Flat head screwdriver	Medium

3.0 Product Disassembly Process

3.1 List the basic steps that should typically be followed to remove components and materials requiring selective treatment:

1. System Board Battery - Locate the battery on the system board. Use a medium flat head screwdriver or fingers to remove the battery and dispose of properly
2. Megacell Module – Remove the top cover and locate the megacell on the system. Remove the megacell and dispose of properly.
3. Capacitors>2.5 cm - Remove the PSU from the system. With screwdriver, remove the screws securing the top cover, locate the capacitors and use a medium flat head screwdriver to remove them and dispose of properly.


3.2 Optional Graphic. If the disassembly process is complex, insert a graphic illustration below to identify the items contained in the product that require selective treatment (with descriptions and arrows identifying locations).

Attachment 1 – System Battery Location

Attachment 2 – Megacell Module Location


Attachment 3 –14-Super Cap Location in PSU

Attachment 1:

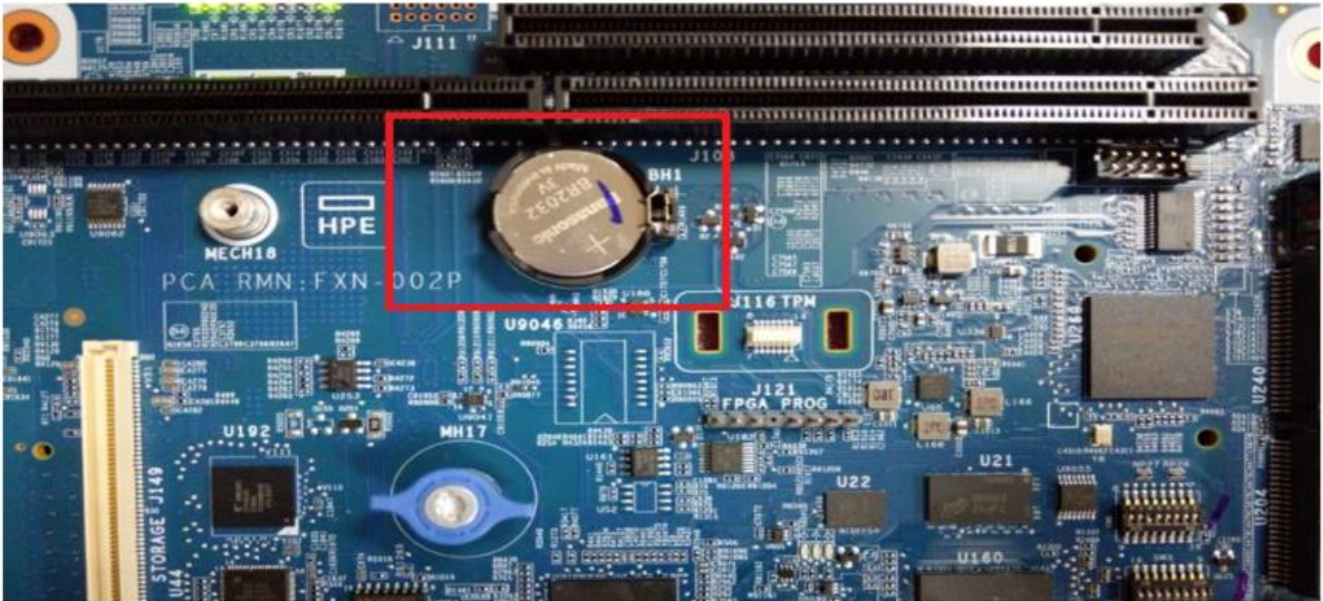

Remove Battery

Attachment2

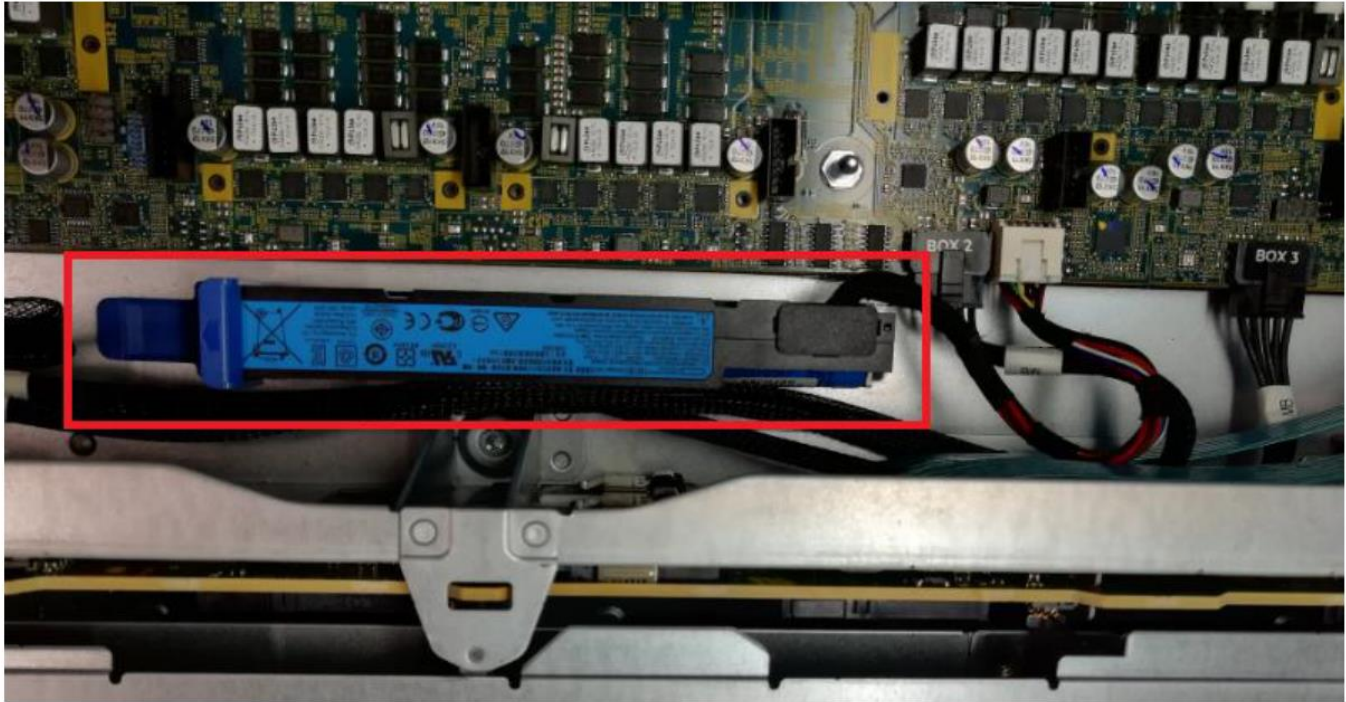

Remove Megacell Module

Attachment3



Model: HSTNS-PD60

Remove capacitor

Attachment4



Model: HSTNS-PD44

Remove capacitor

Attachment5



Model: HSTNS-PL45

Remove capacitor

Attachment6



Model: HSTNS-PC40 Remove capacitor

Attachment7




Model: HSTNS-PL40 Remove capacitor

Attachment8



Model: HSTNS-PD40 Remove capacitor

Attachment9

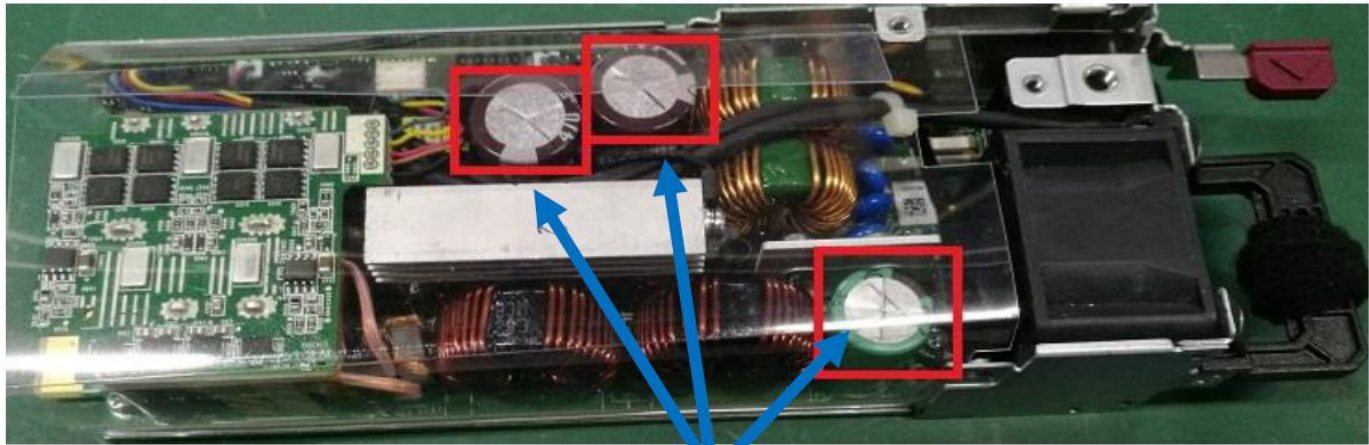

Model: HSTNS-PF46 Remove capacitor

Attachment10



Model: HSTNS-PL41 Remove capacitor

Attachment11



Model: HSTNS-PC41 Remove capacitor

Attachment12



Model: HSTNS-PR62 Remove capacitor

Attachment13



Model: HSTNS-PL62 Remove capacitor

Attachment14



Model: HSTNS-PD41 Remove capacitor