

READ THIS FIRST

Connecting External DVD Drive

List of components


- External DVD drive with 9 inch USB cable
- Power adapter and power cable with Y-connector
- 7 ft USB extension cable

Connecting the external DVD drive

1. Connect the 9 inch USB cable on the DVD drive to the Y-connector on the power cable. (See Figure 1).
2. Connect the USB extension cable to the Y-connector on the power cable.
3. Plug the DVD power adapter into a convenient power outlet.
4. Connect the USB extension cable to the USB connector on the SUV dongle on the server blade or the server USB port.

NOTE: Do **NOT** place the Y-connector between the server and the 7 ft extension cable.

Figure 1 Connecting the DVD drive

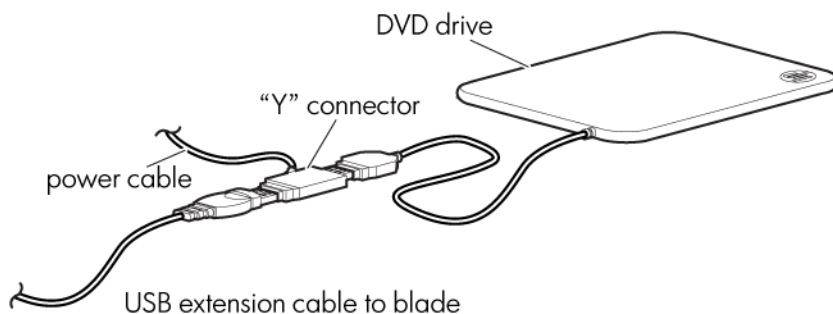

To order any replacement components for your external DVD drive, go to <http://www.partsurfer.hp.com> and enter **AT120A** in the **Quick Search** box.

