



Product End-of-Life Disassembly Instructions

Product Category: Networking Equipment

Marketing Name / Model

[List multiple models if applicable.]

HP A5500-48G-4SFP HI Switch with 2 interface Slots(JG312A)

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HP products to remove components and materials requiring selective treatment, as defined by EU directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

1.2 Enter the quantity of items contained within the product which require selective treatment in the right column, as applicable.

Item Description	Notes	Quantity of items included in product
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 sq cm	4
Batteries	All types including standard alkaline and lithium coin or button style batteries	0
Mercury-containing components	For example, mercury in lamps, display backlights, scanner lamps, switches, batteries	0
Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm	Includes background illuminated displays with gas discharge lamps	0
Cathode Ray Tubes (CRT)		0
Capacitors / condensers (Containing PCB/PCT)		0
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height		0
External electrical cables and cords		2
Gas Discharge Lamps		0
Plastics containing Brominated Flame Retardants weighing > 25 grams (not including PCBs or PCAs already listed as a separate item above)		5
Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner	Include the cartridges, print heads, tubes, vent chambers, and service stations.	0
Components and waste containing asbestos		0
Components, parts and materials containing refractory ceramic fibers		0
Components, parts and materials containing radioactive substances		0

2.0 Tools Required

List the type and size of the tools that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description	Tool Size (if applicable)
Screw driver	2#

3.0 Product Disassembly Process

3.1 List the basic steps that should typically be followed to remove components and materials requiring selective treatment:

1. Unscrew the Power Cable Holder 1.
2. Unscrew all screws 2, and then remove the mounting angle 3.
3. Remove top cover 4, and then remove plastic panel 5.
4. Remove all of the inner cables.
5. Remove part 6 from the chassis.
6. Unscrew all screws of fan 7, and then remove fan 7 from the chassis.
7. Unscrew all screws of battery 8, and then remove battery 8 from the chassis.
8. Unscrew all screws of fan 11, and then remove fan 11 from part 10.
9. Unscrew all screws on part 12, and then remove part 12 from the chassis.
10. Unscrew all screws on Part 13, and then remove Part 13 from the chassis.
11. Unscrew all screws on PCB 14, and then remove PCB 14 from the chassis.
12. Remove all of the labels from the chassis.
13. Remove part 14-2 from PCB 14.
14. Unscrew all screws on PCB 14-3, and then remove PCB 14-3 from PCB 14-1.
15. Unscrew part 14-4, and then remove part 14-4.

3.2 Optional Graphic. If the disassembly process is complex, insert a graphic illustration below to identify the items contained in the product that require selective treatment (with descriptions and arrows identifying locations).

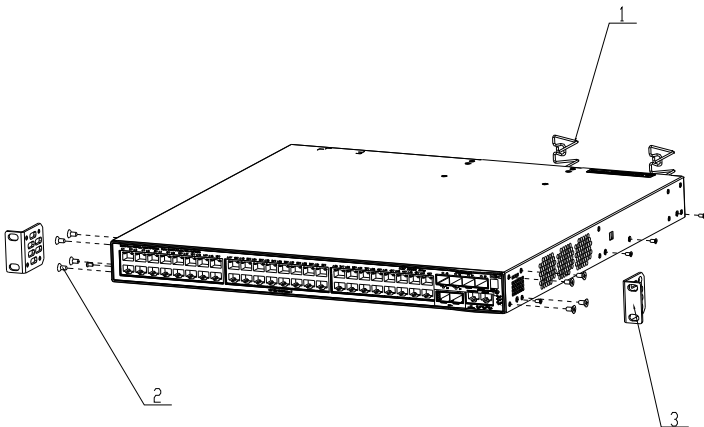


Figure 1 Unscrew the Power Cable Holder 1 and screw 2

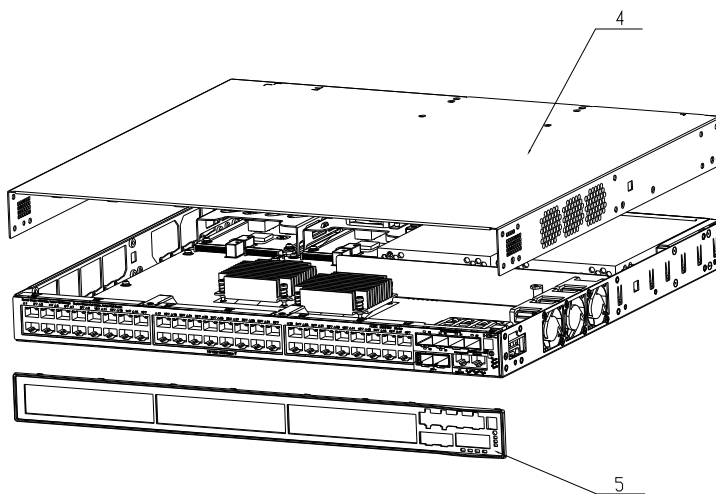


Figure 2 Remove top cover 4 and plastic panel 5

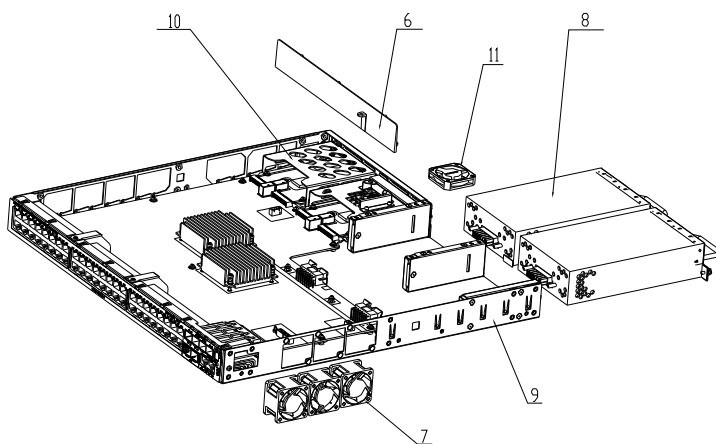


Figure 3 Treatments to the product(I)

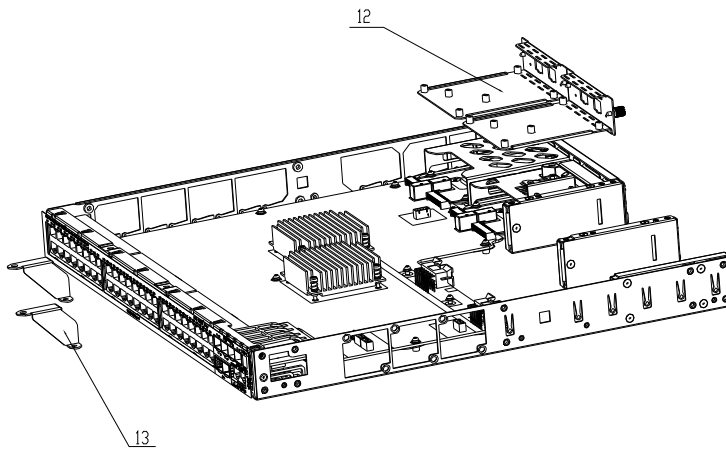


Figure 4 Treatments to the product(II)

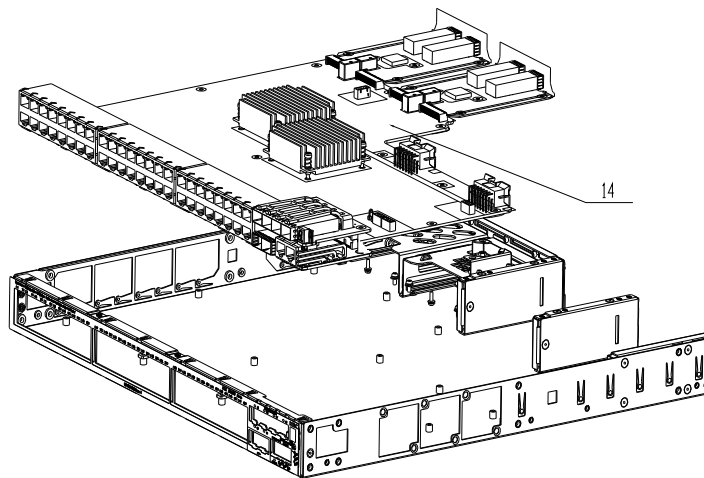


Figure 5 Remove PCB 14

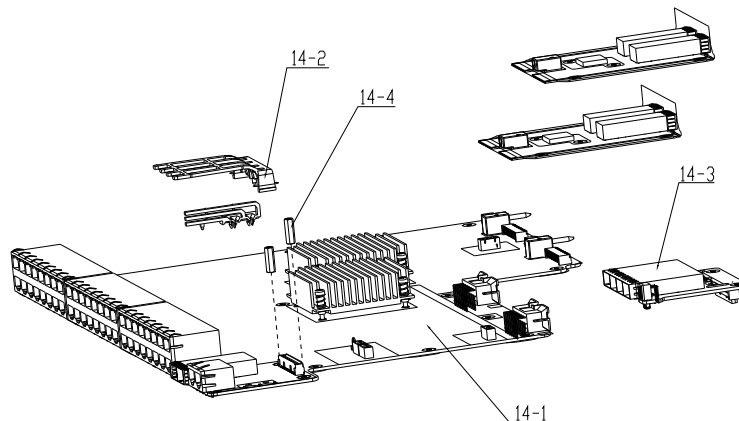


Figure 6 Treatments to PCB 14