

Product End-of-Life Disassembly Instructions

Product Category: Networking Equipment

Marketing Name / Model

[List multiple models if applicable.]

Aruba 7240-US

Name / Model #2

Name / Model #3

Name / Model #4

Name / Model #5

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HPE products to remove components and materials requiring selective treatment, as defined by EU directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

1.2 Enter the quantity of items contained within the product which require selective treatment in the right column, as applicable.

Item Description	Notes	Quantity of items included in product
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 sq cm	3
Batteries	All types including standard alkaline and lithium coin or button style batteries(Lithium 3V)	1
Mercury-containing components	For example, mercury in lamps, display backlights, scanner lamps, switches, batteries	0
Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm	Includes background illuminated displays with gas discharge lamps	0
Cathode Ray Tubes (CRT)		0
Capacitors / condensers (Containing PCB/PCT)		0
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height		0
External electrical cables and cords		2
Gas Discharge Lamps		0
Plastics containing Brominated Flame Retardants weighing > 25 grams (not including PCBs or PCAs already listed as a separate item above)	Front bezel - SABIC cycloy 6200 PC/ABS	0
Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner	Include the cartridges, print heads, tubes, vent chambers, and service stations.	0
Components and waste containing asbestos		0
Components, parts and materials containing refractory ceramic fibers		0

Item Description	Notes	Quantity of items included in product
Components, parts and materials containing radioactive substances		0

2.0 Tools Required

List the type and size of the tools that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description	Tool Size (if applicable)
Phillips screwdriver	No. 1
Phillips screwdriver	No. 2
Description #4	
Description #5	


3.0 Product Disassembly Process

3.1 List the basic steps that should typically be followed to remove components and materials requiring selective treatment:


1. Unfasten 2 screws to remove the fan module from the chassis.
2. Unfasten 1 screw to remove the power supply from the chassis.
3. Open the chassis by removing the screws on the top cover.
4. Uninstall the front bezel.
5. Remove the bridge board from the chassis.
6. Remove the interface board from the chassis.
7. Remove the main board from the chassis.
8. Remove the battery from main board

3.2 Optional Graphic. If the disassembly process is complex, insert a graphic illustration below to identify the items contained in the product that require selective treatment (with descriptions and arrows identifying locations).


1. Unfasten 2 screws to remove the fan module from chassis.
2. Unfasten 1 screw to remove the power supply from chassis.

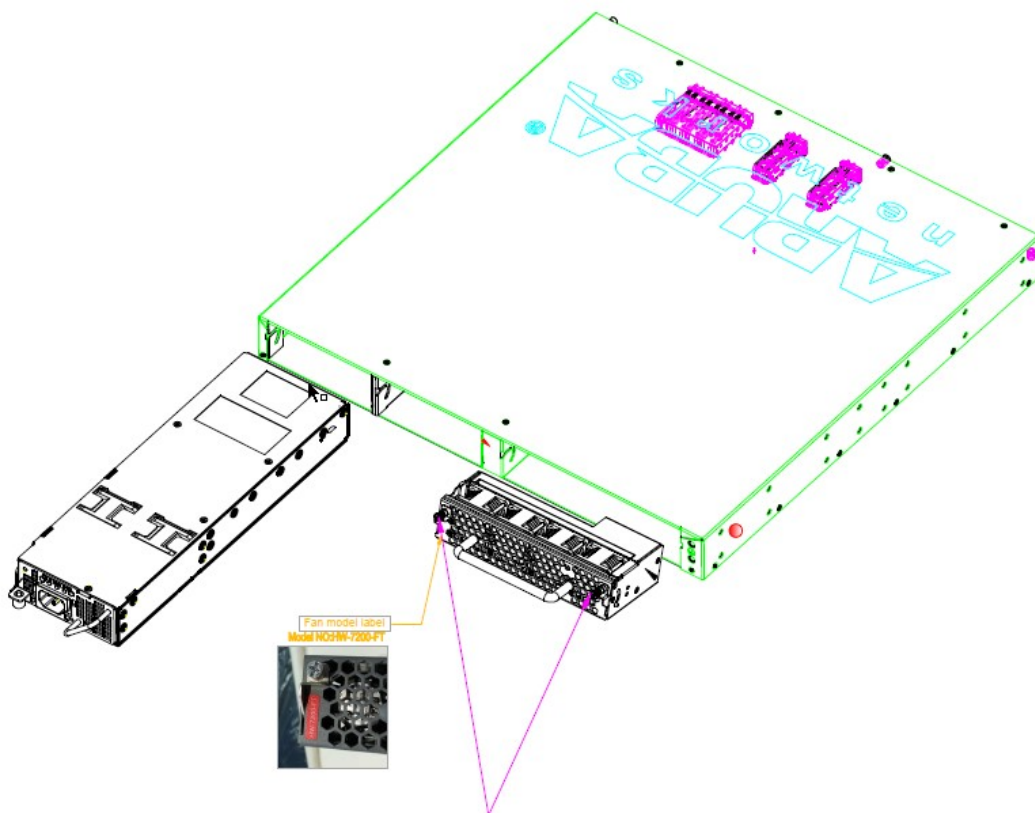

3. Open the chassis by removing the screws on the top cover.
4. Remove the interface board from the chassis.
5. Remove the main board from the chassis.
6. Remove the bridge board from the chassis.

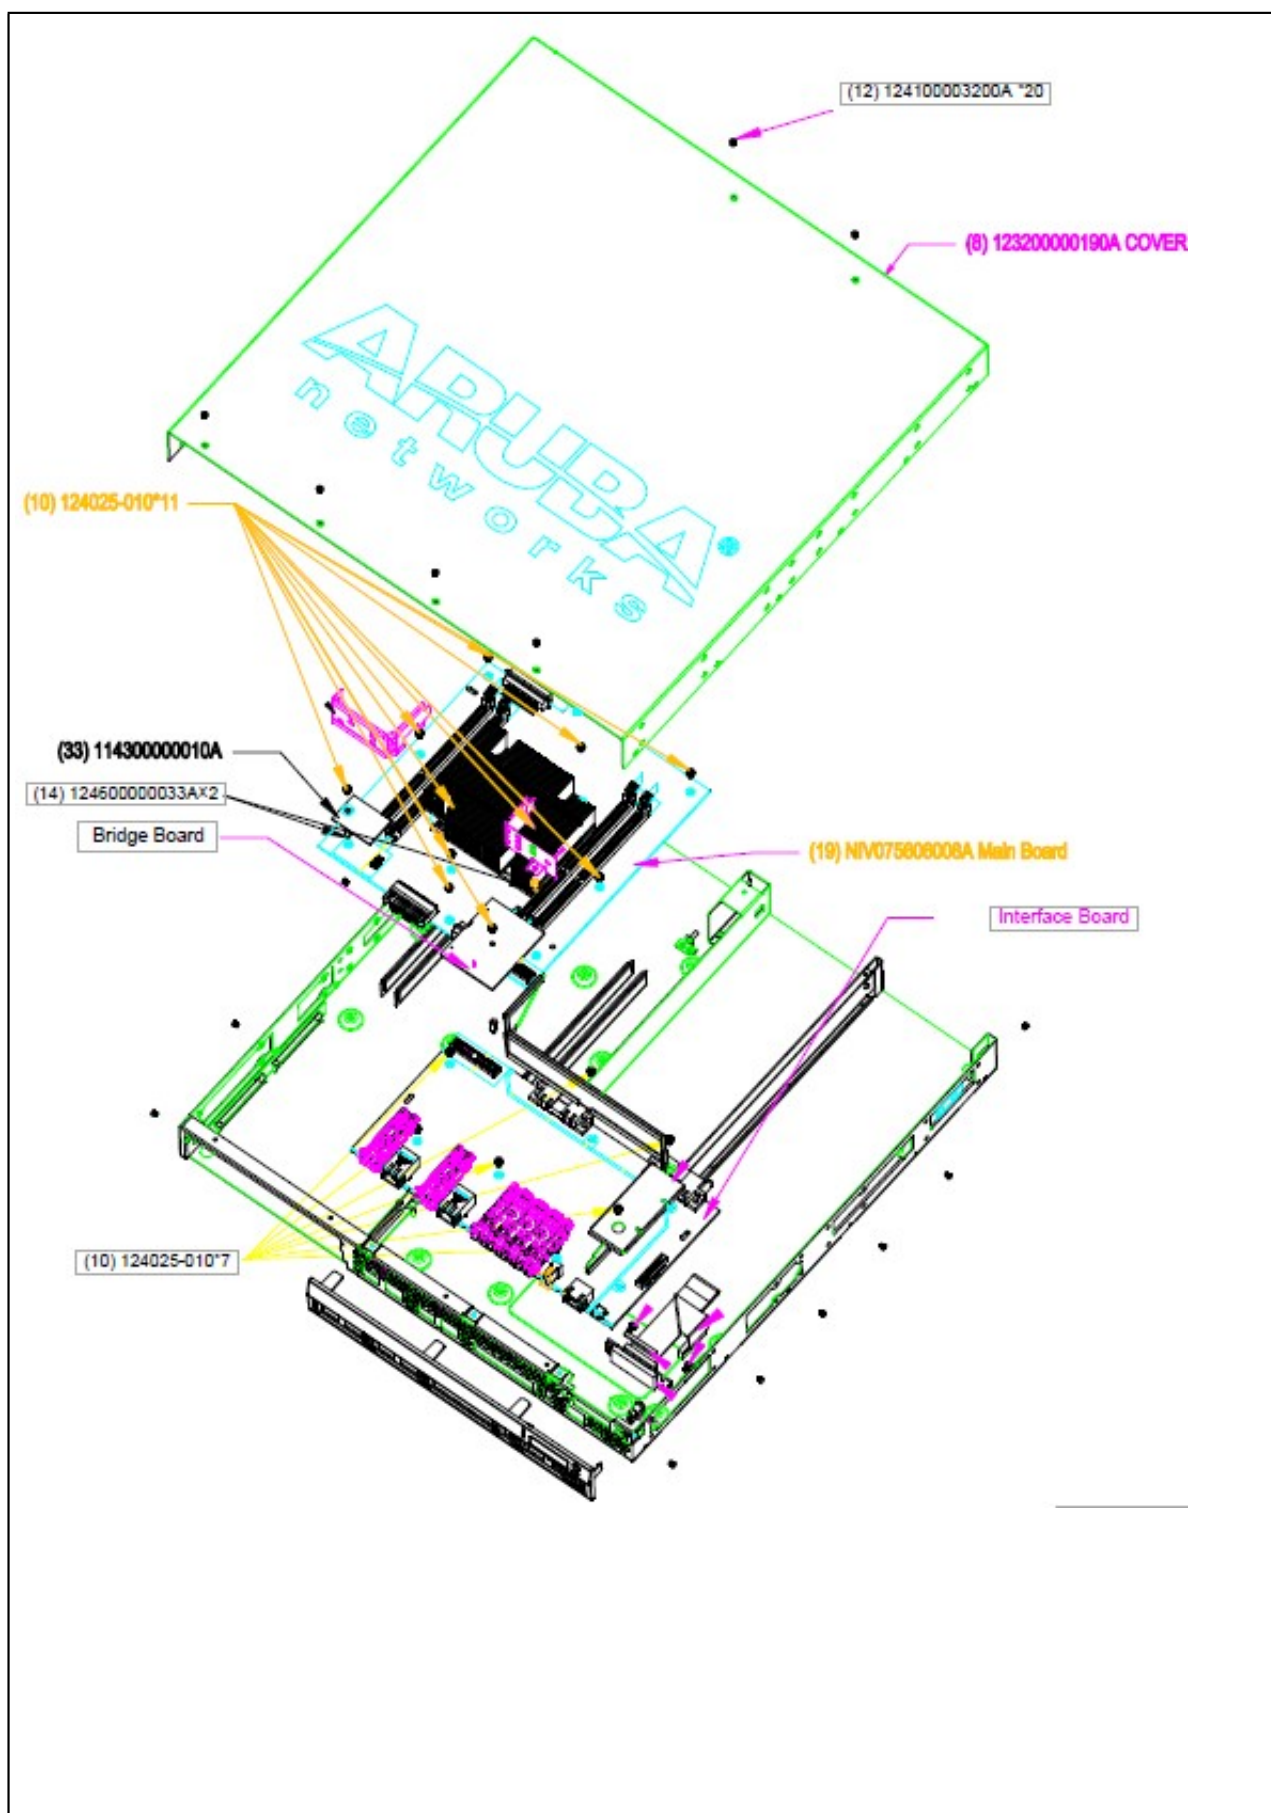

HPE instructions for this template are available at [MF877-01](#)

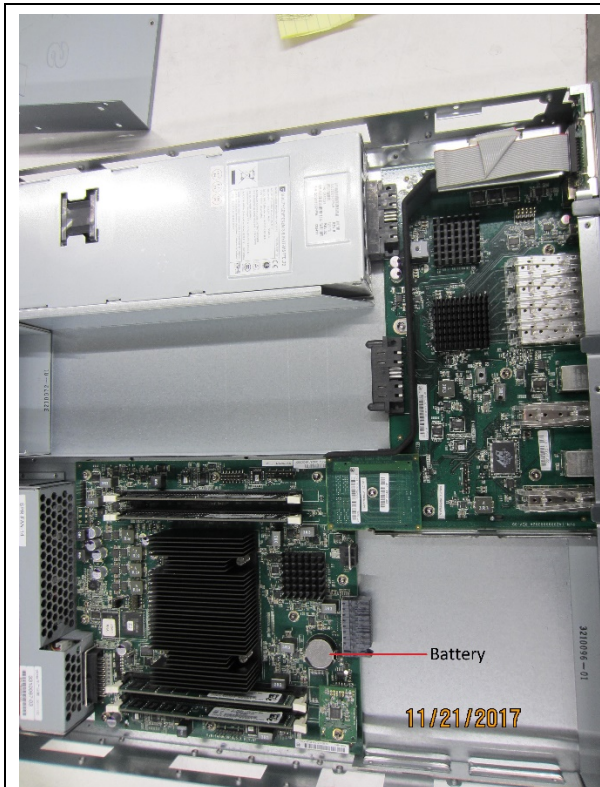

MF877-00
Template Revision A

Page 4