



Product End-of-Life Disassembly Instructions

Product Category: Servers

Marketing Name / Model

[List multiple models if applicable.]

HP ProLiant DL760G2 / DL760R02X-MF31-4P 3.04GHz	HP ProLiant DL760G2 / DL760R02X-LV44-4P 2.5GHz
HP ProLiant DL760G2 / DL760R02X-MF32-4P 2.7GHz	HP ProLiant DL760G2 / DL760R02X-DWF1-4P 2.0GHz
HP ProLiant DL760G2 / DL760R02X-MF33-4P 2.2GHz	HP ProLiant DL760G2 / DL760R02X-DVZ1-4P 1.5GHz
HP ProLiant DL760G2 / DL760R02X-LV41-4P 2.0GHz	HP ProLiant DL760G2 / DL760R02X-FJX1-4P 2.0GHz
HP ProLiant DL760G2 / DL760R02X-LV42-4P 2.8GHz	

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HP products to remove components and materials requiring selective treatment, as defined by EU directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

1.2 Enter the quantity of items contained within the product which require selective treatment in the right column, as applicable.

Item Description	Notes	Quantity of items included in product
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 sq cm	12
Batteries	All types including standard alkaline and lithium coin or button style batteries	1
Mercury-containing components	For example, mercury in lamps, display backlights, scanner lamps, switches, batteries	
Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm	Includes background illuminated displays with gas discharge lamps	
Cathode Ray Tubes (CRT)		
Capacitors / condensers (Containing PCB/PCT)		
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height		24
External electrical cables and cords		
Gas Discharge Lamps		
Plastics containing Brominated Flame Retardants		
Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner	Include the cartridges, print heads, tubes, vent chambers, and service stations.	
Components and waste containing asbestos		
Components, parts and materials containing refractory ceramic fibers		
Components, parts and materials containing radioactive substances		

2.0 Tools Required

List the type and size of the tools that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description	Tool Size (if applicable)
Torx Driver	T-15
Philips Driver	# 2
Flat Head Screw Driver	Medium

3.0 Product Disassembly Process

3.1 List the basic steps that should typically be followed to remove components and materials requiring selective treatment:


1. System Board Battery – Remove the top cover and locate the battery on the system board. With a medium flat head screw driver remove the battery and dispose of properly.
2. Capacitors > 2.5CM – Remove the power supply(s) from the system. With #2 Philips screw driver remove the screws securing the top cover and the heatsinks in the P/S then locate the capacitors and pry from the PCB with a medium flat head screw driver and dispose of properly.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.

3.2 Optional Graphic. If the disassembly process is complex, insert a graphic illustration below to identify the items contained in the product that require selective treatment (with descriptions and arrows identifying locations).


Attachment 1, 2, 3 & 4 – Disassembly Diagram

Attachment 5 – System Battery Location


Attachment 6, 7 & 8 – Capacitors Location

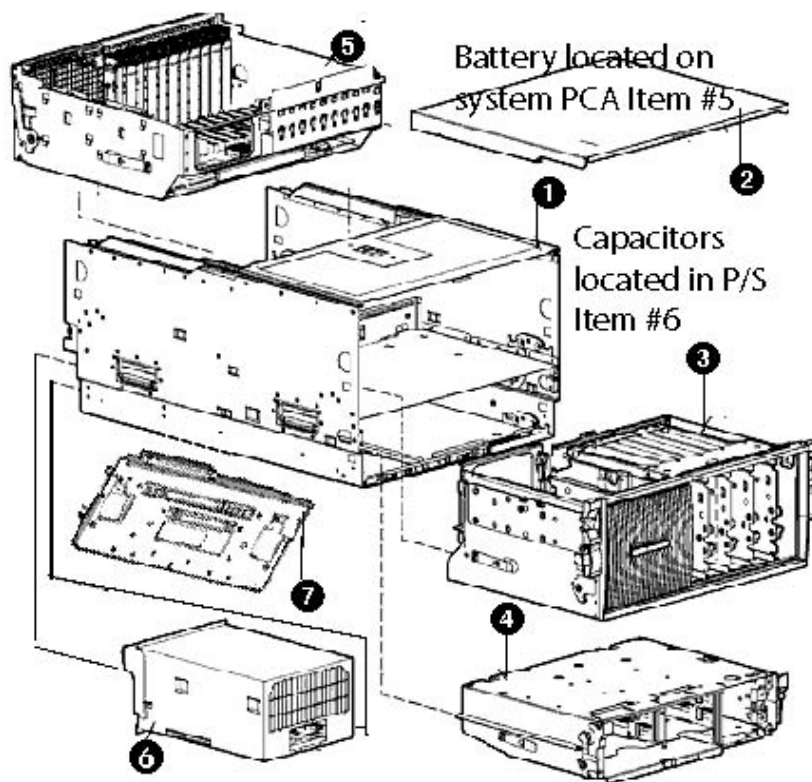


Attachment 1

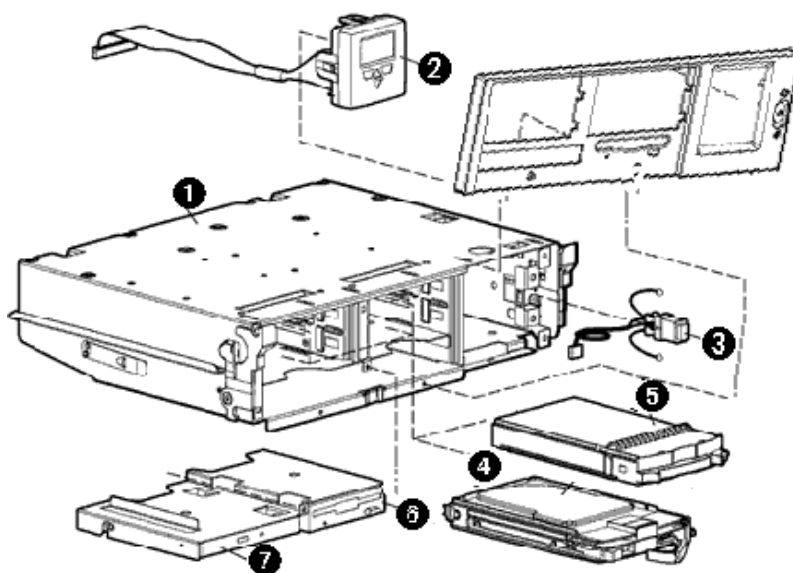


Attachment 2

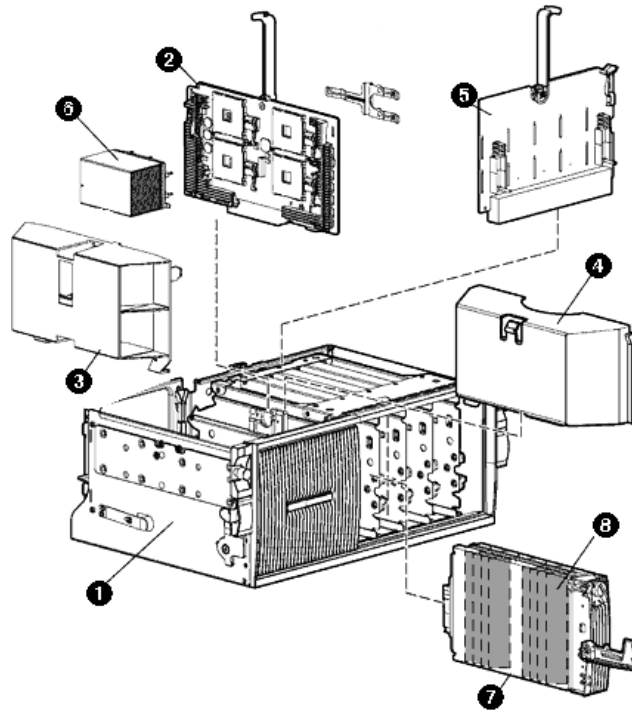


Attachment 3

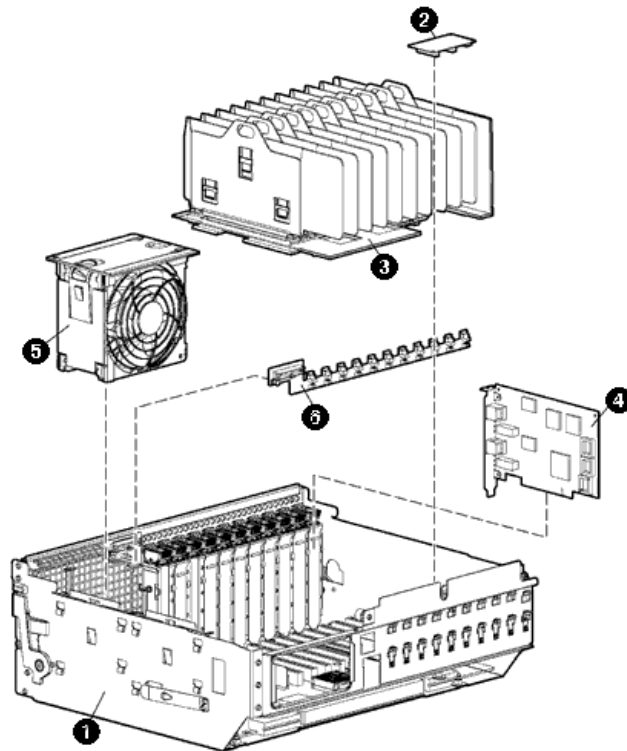


Attachment 4

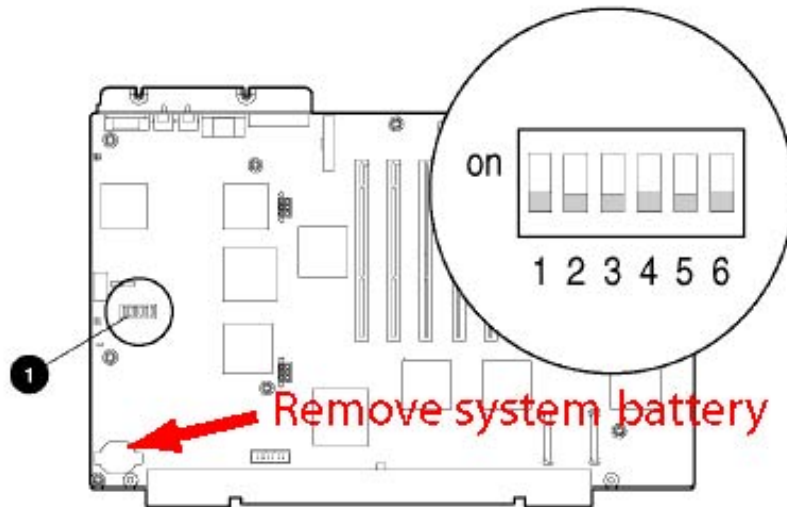


Attachment 5

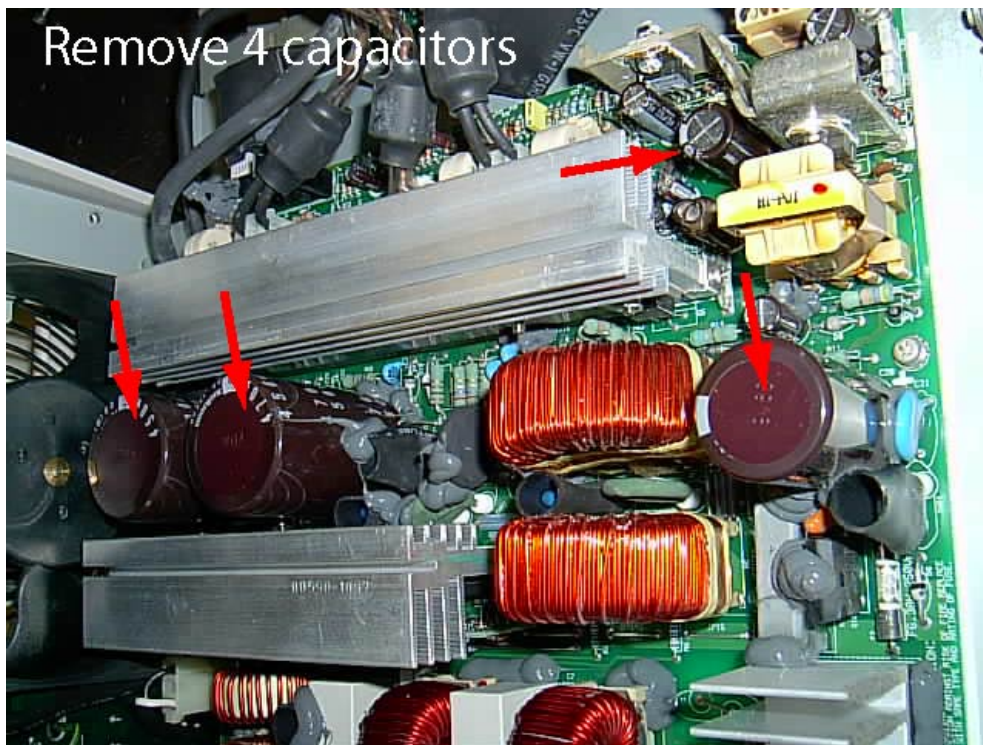

Attachment 6

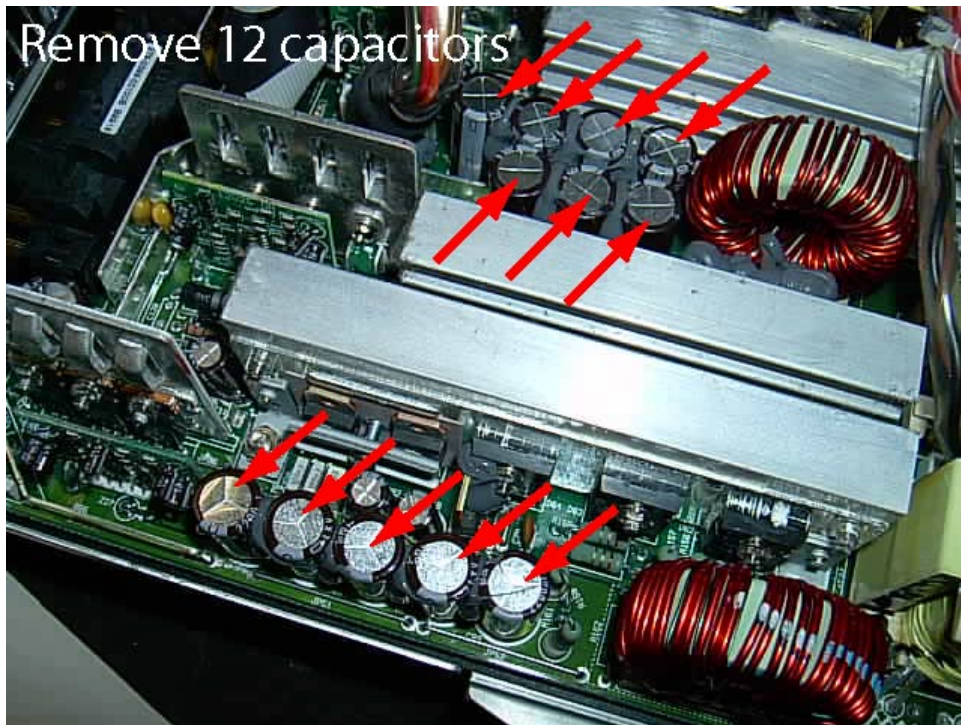

Attachment 7

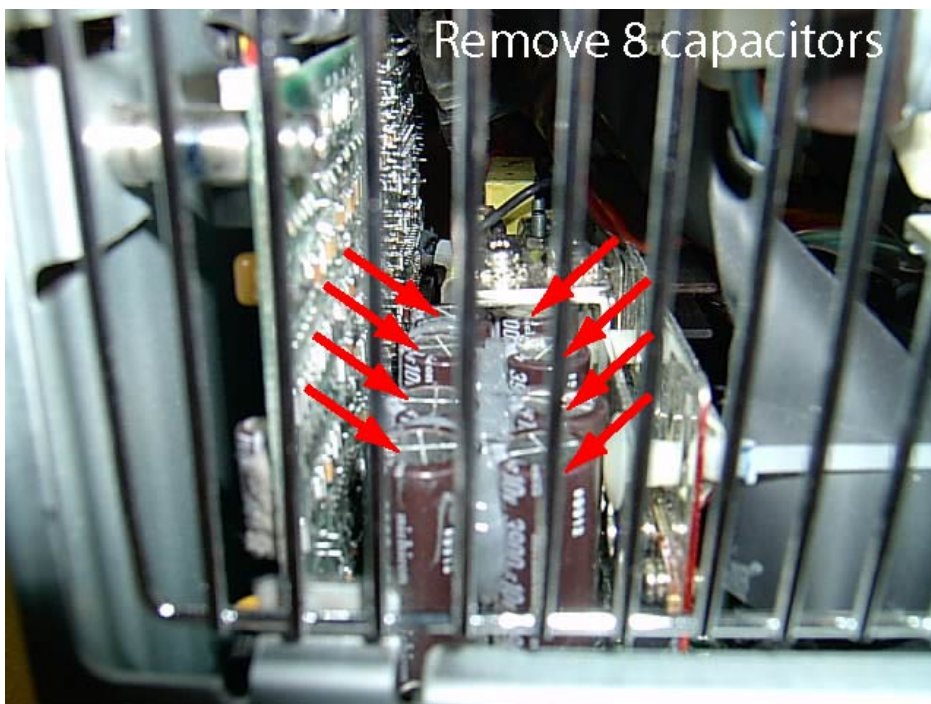

Attachment 8