

Product End-of-Life Disassembly Instructions

Product Category: Other Products

Marketing Name / Model
[List multiple models if applicable.]

HPE T750 G5 INTL Tower UPS

HPE T1000 G5 INTL Tower UPS

HPE T1500 G5 INTL Tower UPS

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HPE products to remove components and materials requiring selective treatment, as defined by EU directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

1.2 Enter the quantity of items contained within the product which require selective treatment in the right column, as applicable.

| Item Description | Notes | Quantity of items included in product |
|--|---|---------------------------------------|
| Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA) | With a surface greater than 10 sq cm | 4 |
| Batteries | All types including standard alkaline and lithium coin or button style batteries | 3 |
| Mercury-containing components | For example, mercury in lamps, display backlights, scanner lamps, switches, batteries | 0 |
| Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm | Includes background illuminated displays with gas discharge lamps | 0 |
| Cathode Ray Tubes (CRT) | | 0 |
| Capacitors / condensers (Containing PCB/PCT) | | 0 |
| Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height | | 2 |
| External electrical cables and cords | | 0 |
| Gas Discharge Lamps | | 0 |
| Plastics containing Brominated Flame Retardants weighing > 25 grams (not including PCBs or PCAs already listed as a separate item above) | | 0 |
| Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner | Include the cartridges, print heads, tubes, vent chambers, and service stations. | 0 |
| Components and waste containing asbestos | | 0 |
| Components, parts and materials containing refractory ceramic fibers | | 0 |
| Components, parts and materials containing radioactive substances | | 0 |

2.0 Tools Required

List the type and size of the tools that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

| Tool Description | Tool Size (if applicable) |
|-----------------------|---------------------------|
| Philips Screwdriver | 3/16 |
| Hex Driver | |
| Heavy Wire Cutters | |
| Flat Head Screwdriver | |
| Pliers | |



3.0 Product Disassembly Process

3.1 List the basic steps that should typically be followed to remove components and materials requiring selective treatment:

1. Remove front bezel
2. Disconnect and remove the two battery packs
3. Remove Mini-Slot card and dispose of properly (if applicable--Philips screwdriver)
4. Remove top cover (Philips screwdriver)
5. Remove IO Board (Philips screwdriver)
6. Disconnect Control Board connections and remove Control Board (Philips screwdriver)
7. Disconnect Power Board connections and remove Power Board (Philips screwdriver)
8. Remove 3 tall capacitors from Power Board and dispose of components properly (Flat head screwdriver)
9. Remove Rear Panel and cut external power cord if applicable (Philips screwdriver, wire cutters)
10. Remove Comm Board from Rear Panel (Philips screwdriver, hex driver, wire cutters)
11. Disassemble battery pack

3.2 Optional Graphic. If the disassembly process is complex, insert a graphic illustration below to identify the items contained in the product that require selective treatment (with descriptions and arrows identifying locations).

Batteries:

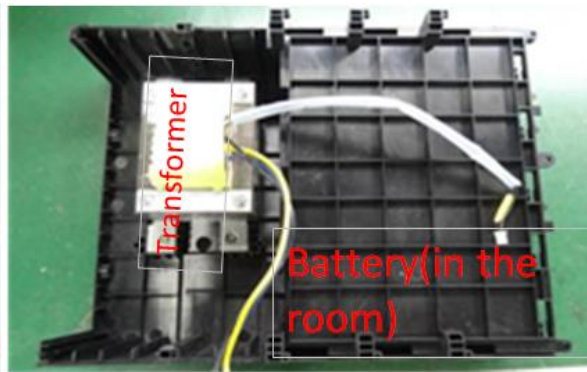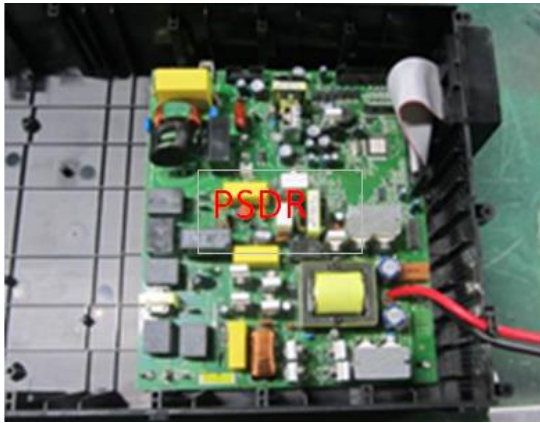

| HPE T750 G5 | HPE T1000 G5 | HPE T1500 G5 |
|-------------|--------------|--------------|
| | | |

Capacitors greater than 2.5cm



2 Electrolytic Capacitors